


# Operating Instructions for AllSeating Therapod Therapist

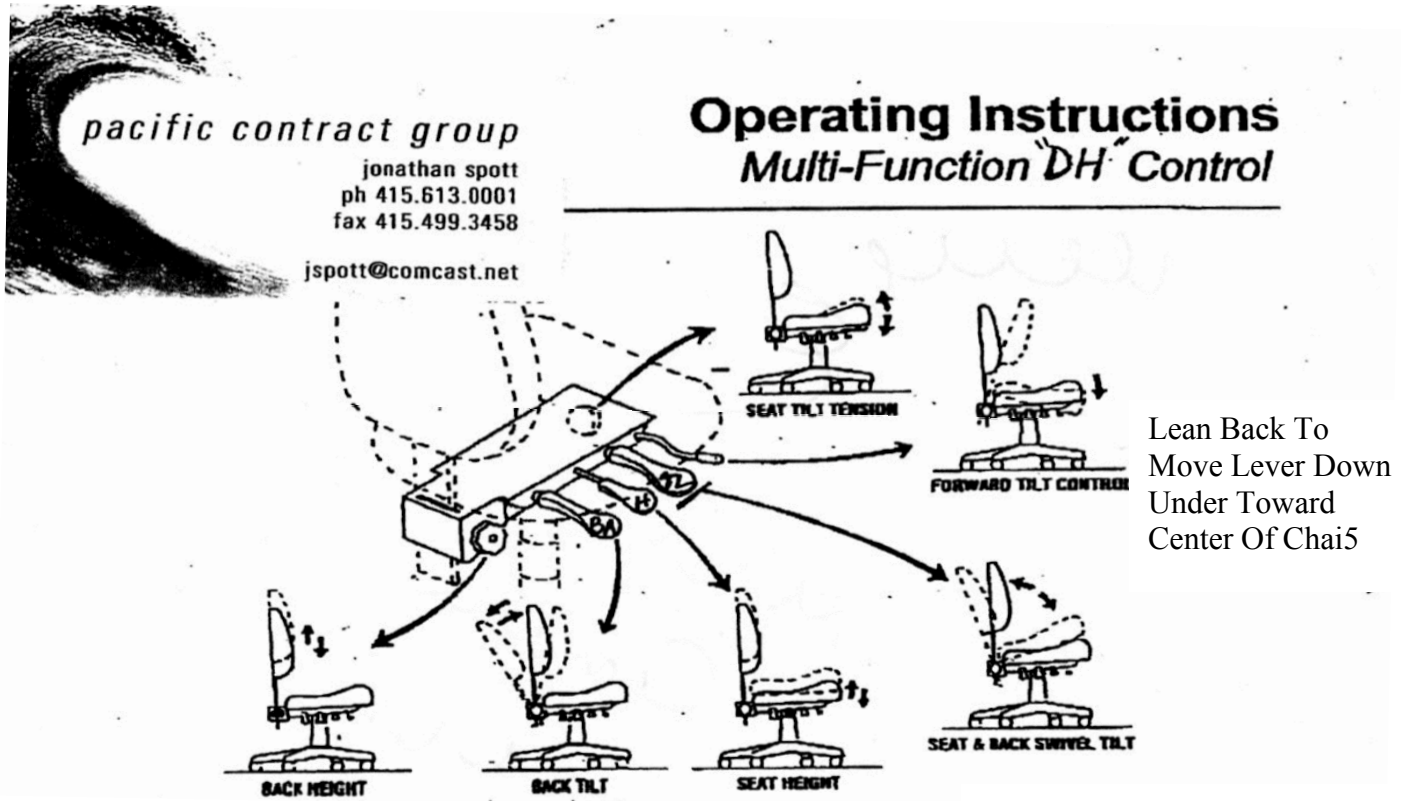

## Seat Tilt Tension

The seat tilt tension is adjusted by turning the knob located on the control under the seat. While sitting on the chair, turn the knob to the left to increase tension and to the right to decrease tension.

## Forward Tilt Control (For seat angle only)

To tilt the seat forward, flip the Seat and Back Swivel Tilt paddle up into the unlock position. Lean back slightly against the back and rotate the Forward Tilt control lever downward. To lock the seat in this position, flip the Seat and Back Swivel Tilt paddle down into the locked position.

## Seat and Back Swivel Tilt (“TL” = Tilt Lock)

To rock in the chair, flip the Seat and Back Swivel Tilt paddle up into the unlocked position. To lock the chair into a fixed position, flip the Seat and Back Swivel Tilt paddle into the locked position.

## Seat Height (“H” = Height)

To adjust the seat height, hover over the chair in the sitting position and pull up on the Seat Height paddle to extend the seat to the desired height. To lower the chair sit in the chair and pull up on the Seat Height paddle for desired height.

## Back Tilt (“BA” = Back Angle)

To adjust the back angle, sit in the chair and flip the Back Tilt paddle up into the unlocked position, and lean forward or backward to the desired position/angle then flip the Back Tilt paddle down into the locked position.

## Back Height (DJ mechanism = ratchet style back)

To adjust the back height, pull up on the back and set in desired locked position. To drop the back down to its lowest position pick it all the way up until it unlocks and drop it back down.